



AC PRESSURE
WASHERS

WFP Conversion Kit—Fitting Instructions

Step 1:


Attach your inline trigger to the base of your pole.

You can either drill 2 holes into your pole on one side, cut down the bolts provided and fit using the mounting bracket that came with your kit. You can cable tie it on the base for a quick mount, or you can use pipe clamps (sold separately).



Step 2:

Screw any side of your new lightweight hose into the outlet of your trigger. Making sure the bonded seal is fitted to the thread of the fitting

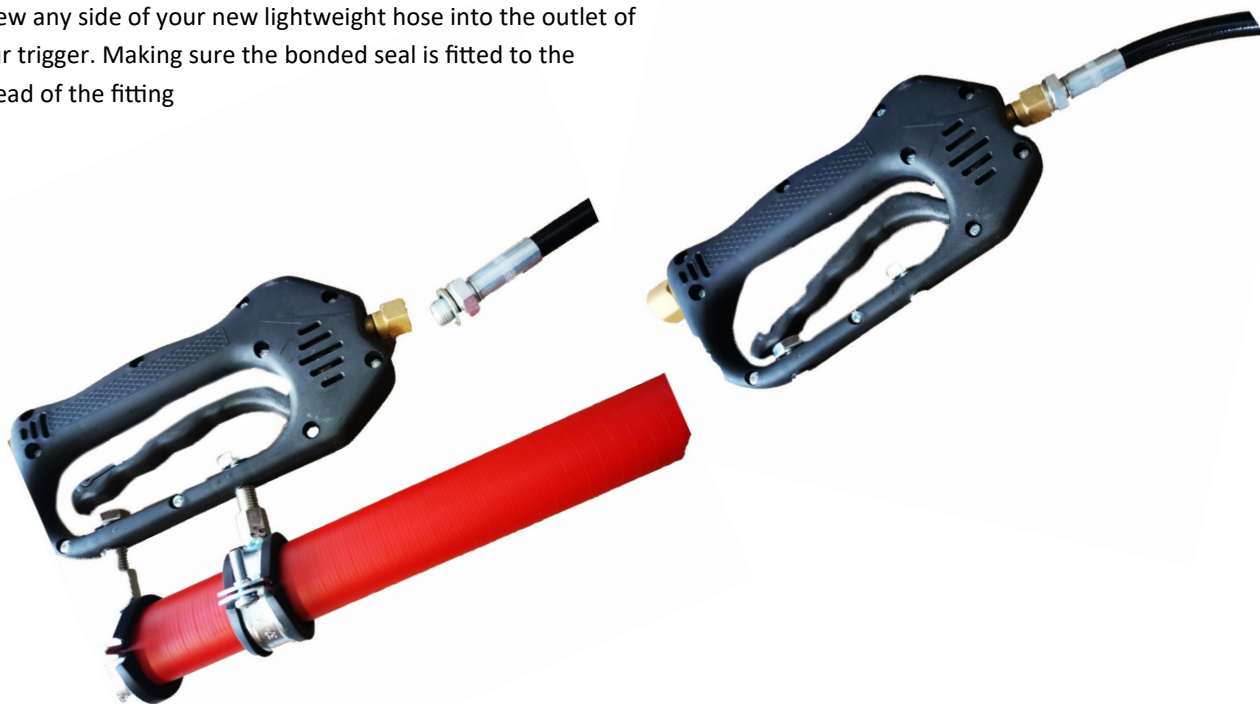

Step 3:

Remove the top section of your WFP. Then feed the other end of your lightweight hose up the pole until it reached the end.



Step 4:

Screw your new pole adaptor onto the lightweight hose, ensuring the seal is secure and is fitted tightly.
Push your pole adaptor into your pole and clamp.



Step 5:

Screw your angled adaptor into your pole adaptor



Step 6:

The WFP Conv Kit is supplied with a variety of quick releases and fittings for the inlet of your trigger.

Once fitted, you can connect your existing pressure washer hose to it.

Please reduce your pressure before operating.

